

Esc F1 F2 F3 F4 F5 F6 F7 F8 F9 F10 F11 F12

89 Key Base
www.geekhack.org

~ ` ! 1 @ 2 # 3 \$ 4 % 5 ^ 6 & 7 * 8 (9) 0 - _ + = Backspace (2)

Tab (1.5) Q W E R T Y U I O P { [}] | \ (1.5)

CapsLock (1.75) A S D F G H J K L ; : " ' , ' Enter (2.25)

Left Shift (2.25) Z X C V B N M < , > . / ? / Right Shift (2.75)

Ctrl (1.25) Win (1.25) Alt (1.25) Space (6.25) Alt (1.25) Win (1.25) Meta (1.25) Ctrl (1.25)

10 key

Num Lock /

* -

Print Screen Scroll Lock Pause GEEK HACK

Insert Home Page Up GEEK HACK

Delete End Page Down ↑

← ↓ →

★ ◆ **Tsangan** ◆ ★

Caps Lock (1.75) Note that stepped CapsLock has an off-centre stem Note this is for a G80-18xx or similar keyboard Right Shift (1.75)

Space (7)

Ctrl (1.5) Alt (1.5) Alt (1.5) Ctrl (1.5)

7 8 9 +

4 5 6

00 1 2 3 Enter

0 0 .